

# F4 Temperature Controller

## USB/RS485 Interface application note

Date: Oct 2012

### *Objective:*

The F4 temperature controller comes with USB communication interface option. The model number should be the F4-xxU

The F4 temperature controller also comes with RS485 communication interface option. The model number should be F4-xxC

Note\* x: not care, U: USB interface option, C: RS485 interface option

### *F4 - USB wire connection:*


A USB-serial communication cable is required option – URC-1020. There is also a panel mount cable version available. Please check with our customer service dept.

F4 – Pin #13 (Tx+ / Tx) ----- USB Green Wire

F4 – Pin #14 (Tx- / Rx) ----- USB White Wire

F4 – Pin #15 (Gnd) ----- USB Black Wire

- The label only showing RS485 connection

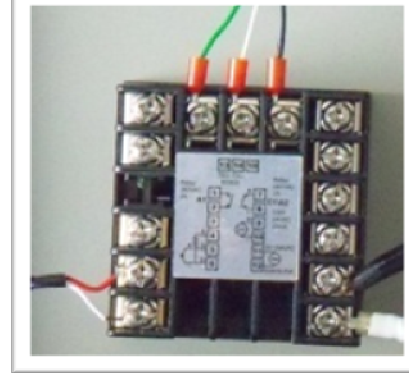

### *F4-RS485 wire connection: (only two wires)*

F4-Pin#13 (Tx+) connect to RS485 device Tx+

F4-Pin#14 (Tx-) connect to RS485 device Tx-

### *F4 – Communication Default Setting:*

Controller ID number: 247

Baud Rate: 19.2K

Protocol: N-8-2